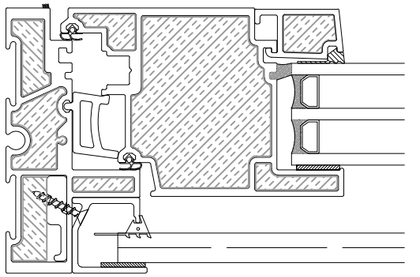

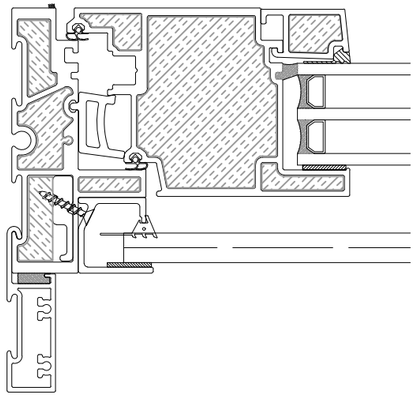

GENERAL NOTE: JULIET BALCONY SITE INSTALLATION INSTRUCTION APPLIES TO BOTH WINDOW WALL SYSTEM AND UNIVERSAL WINDOW WITH NO WINDOW WALL METAL.

STEP 1: COMPLETELY INSTALL THE WINDOW/DOOR INTO THE ROUGH OPENING (RO), AND OPEN THE WINDOW/DOOR FROM INTERIOR TO PROVIDE ACCESS OF JULIET BALCONY. ENSURE WORKERS ARE IN FALL RESTRAINT PRIOR TO OPENING WINDOW OR DOOR.

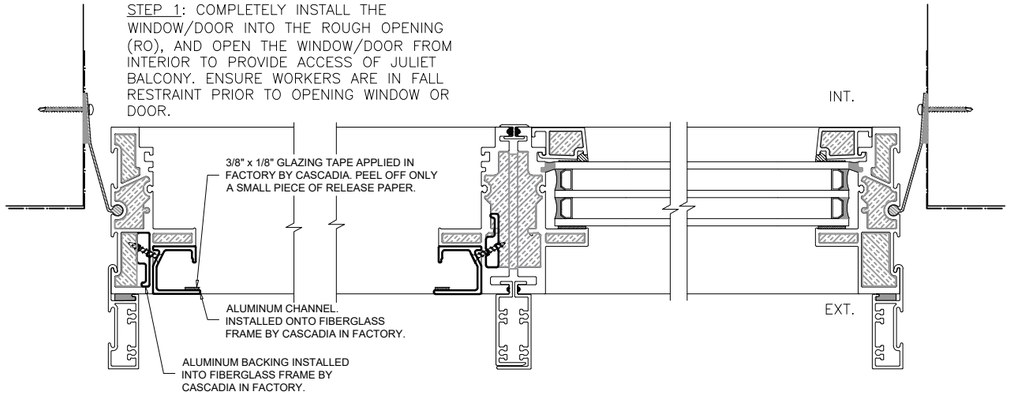

STEP 2: INSTALL LAMI GLASS INTO ALUMINUM CHANNEL.

2A: PUT ONE SIDE OF GLASS INTO CHANNEL. SLIDING GLASS TO THE END OF THE CHANNEL.

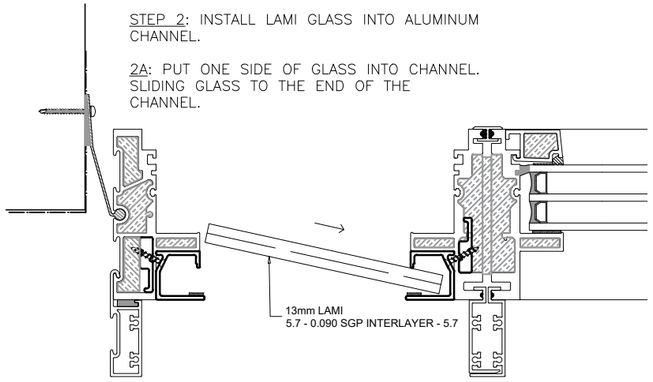

STEP 2: INSTALL LAMI GLASS INTO ALUMINUM CHANNEL.

2B: PUSH OUT THE OTHER SIDE OF GLASS UNTIL THE GLASS IS PARALLEL WITH THE WINDOW/DOOR.

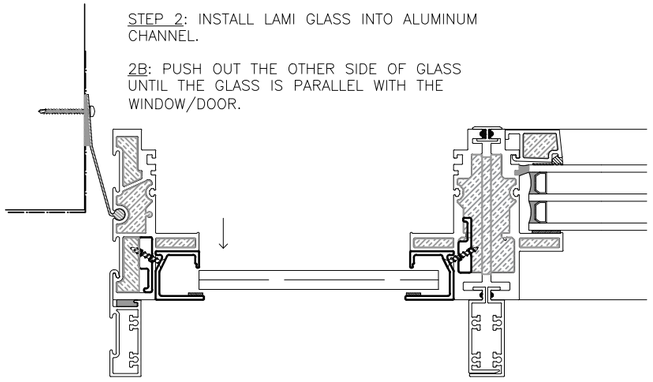

STEP 2: INSTALL LAMI GLASS INTO ALUMINUM CHANNEL.

2C: SLIDE THE GLASS SO IT IS CENTERED IN THE CHANNEL. ALLOW IT TO DROP INTO THE CENTERED POSITION IN BETWEEN BOTTOM BLOCKS IN CHANNELS.

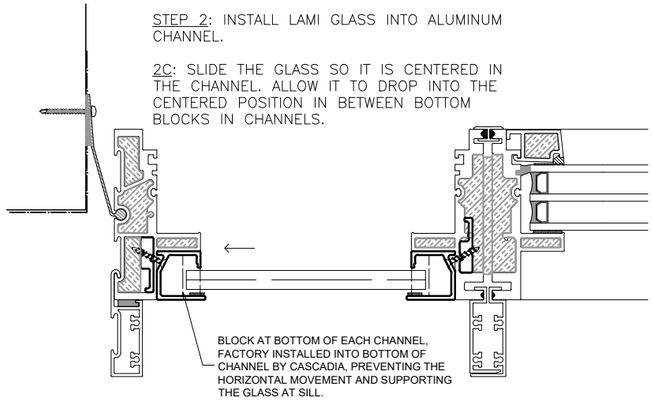

STEP 3: INSTALL THE TOP BLOCK AT EACH CHANNEL WITH (2) SCREWS.

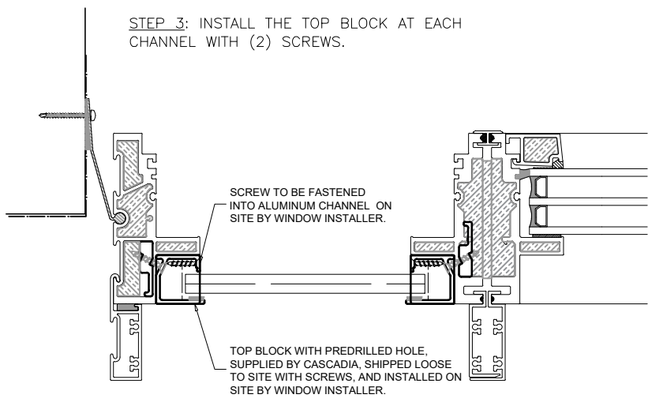

STEP 4: REMOVE THE RELEASE PAPER AND GENTLY PUSH GLASS AGAINST THE GLAZING TAPE.

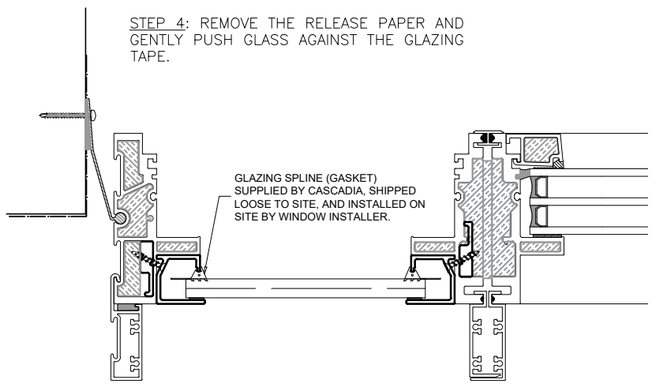

STEP 5: INSTALL GLAZING SPLINE (GASKET) BETWEEN LAMINATED GLASS AND CHANNEL.

CASCADIA WINDOWS

CASCADIA WINDOWS LTD.

#101-5350 275TH STREET
LANGLEY, BC CANADA V4W 0C1
604-857-4600

*PLEASE NOTE THIS IS A GENERIC INSTALLATION INSTRUCTION GUIDE AND MAY NOT REPRESENT PROJECT SPECIFIC REQUIREMENTS (GLAZING TYPE, OPERATION, ETC). PLEASE REFER TO PROJECT SHOP DRAWINGS FOR SPECIFICS.

PROJECT TITLE:

JULIET BALCONY INSTALLATION

ISSUE	DESCRIPTION	DATE

DRAWING TITLE:

SITE INSTALLATION INSTRUCTIONS

SCALE: N.T.S.
DATE:
DRAWN BY: RZ
PROJECT #:

DRAWING NO.: JU.1